

TV Help Sheet

There are three remote units. One says Magnavox and controls the sound and determines whether you can watch TV, a video, or a DVD.

The DirectTV controller is used to change channels on the TV.

The TV controller is used only to turn the TV on and off.

For satellite TV - the Magnavox unit must be turned on and set to VCR. Then with the VCR/TV button, one can select the satellite source. The input on the surround system (Magnavox) should be set to LINE 1.

For a video tape - the Magnavox unit must be turned on and set to VCR, but with the VCR/TV button, one selects VCR. Turn tape on, and control the tape with the Magnavox remote.

For a DVD, the Magnavox unit must be turned on and set to DVD. Control the DVD with the Magnavox remote.

For ALL of these, the TV input should be set to AV1. You should ordinarily never have to change this.

ONLY for HDTV, when it comes, one CAN set the TV input to L2. This will give the best possible picture, but the picture is also very good on AV1. NOTE: Neither the DVD nor the VCR will work with the TV set to L2. Set it to AV1.